


14 TUBES: **A:** separate the only 2 tubes with a red cap on each end. **B:** BOTTOM BAR-slide 2 thin tubes into 1 fat tube. 1 thin tube is inserted already. Leave it there. Press bottom bar into caps. **C:** Insert 2 white stumps.

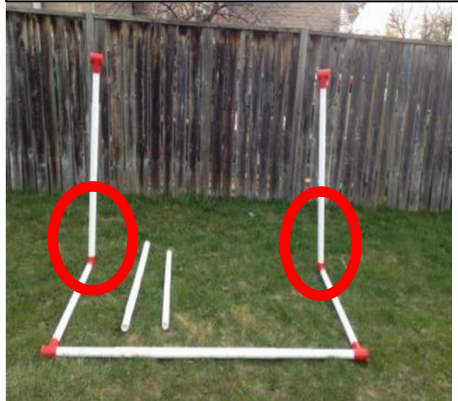

Slide uprights over stumps. Uprights are inserted into fat tubes already. Leave there. Top bar is exactly same as the bottom bar: 2 thin tubes into 1 fat tube. (1 is already inserted) MESH: **Tie red strap in middle.**



Hook corners on top. Pull straight down, do not twist and hook fronts, then back! Done! To take apart, TAKE MESH ALL OFF FIRST! DO NOT STRUGGLE. PERMANENT TUBES: VERY TIGHT! REMOVABLE TUBES VERY LOOSE!

If a RED CAP EVER POPS OFF, it is designed to so that it does not crack. It is part of the design. Just line it up and pop it back on with a tap on the ground! It re-grips with CRUSH RIBS! NO glue or screws ever. DO NOT struggle to take tubes apart. They slide apart once the mesh is ALL off. Tom Stewart : Inventor
Talk/Text: 647-991-3528 **www.Eznet.me**

Please phone with any questions!